

## CHAPTER THREE

# LUBRICATION, MAINTENANCE AND TUNE-UP

This chapter includes lubrication, maintenance and tune-up procedures required for the Honda models covered in this book.

**Table 1** lists the recommended maintenance and lubrication schedule.

**Table 2** lists tire inflation specifications.

**Table 3** lists maintenance and tune-up torque specifications.

**Table 4** lists battery capacity.

**Table 5** lists recommended lubricants and fuel.

**Table 6** lists engine oil capacity.

**Table 7** lists front and rear differential oil capacity.

**Table 8** lists toe-in/out specifications.

**Table 9** lists maintenance specifications.

**Tables 1-9** are located at the end of this chapter.

### PRE-RIDE CHECK LIST

Perform the following checks before the first ride of the day. All of these checks are described in this chapter. If a component requires service, refer to the appropriate section.

1. Inspect all fuel lines and fittings for leaks.
2. Make sure the fuel tank is full of fresh gasoline.
3. Make sure the engine oil level is correct.
4. Check the throttle operation for proper operation in all steering positions. Open the throttle all the way and release it. The throttle should close quickly with no binding or roughness.
5. Make sure the brake levers operate properly with no binding. Replace any broken lever. Check the lever housings for damage.

Copyright of Honda TRX350 RANCHER, 2000-2006 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.